

# POWERFLEX®

## PART NUMBER

# PFF12-802

## DESCRIPTION

## FRONT WISHBONE REAR BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Polyurethane Bushes      1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the original rubber bush from the bracket and arm and remove the outer shell.
2. Clean any dirt and corrosion from the bore of the bracket and the end of the arm.
3. Insert the polyurethane bush into the bore of the bracket, with the chamfered edge getting pushed in first.

**Tip: It may be necessary to apply some washing up liquid onto the bush to ensure fitting.**

4. Refit the bracket back onto the arm and the wishbone arm back onto the vehicle.
5. Tension all hardware to manufacturers recommended torque settings.

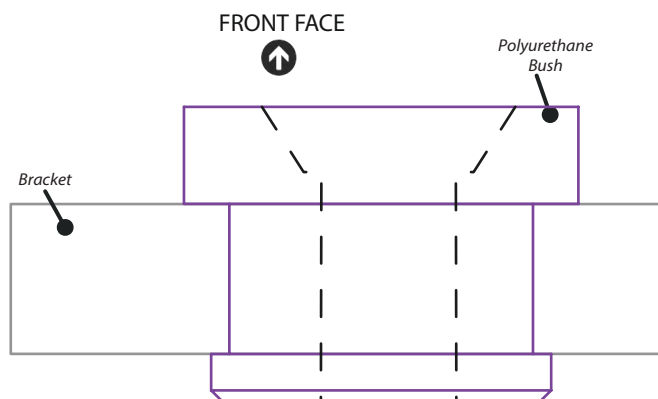


Figure 1 - Cross section view showing how the polyurethane bush fits inside the bracket



Figure 2 - fitted image showing PFF12-802 and PFF12-501