

# POWERFLEX®

PART NUMBER

**PFF19-802**

DESCRIPTION

**FRONT WISHBONE LOWER REAR BUSH**

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Polyurethane Bushes    1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the original metal bracket from the front wishbone lower rear position and retain for further use.
2. Remove the original rubber bush from the front wishbone lower rear position.
3. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.
4. Insert the polyurethane part into the spigot of the arm with the lip of the bush facing towards the front of the vehicle.
5. Attach the original metal bracket onto the new polyurethane bush.
6. Refit the arm back to the vehicle and tension all hardware to manufacturers recommended torque settings.

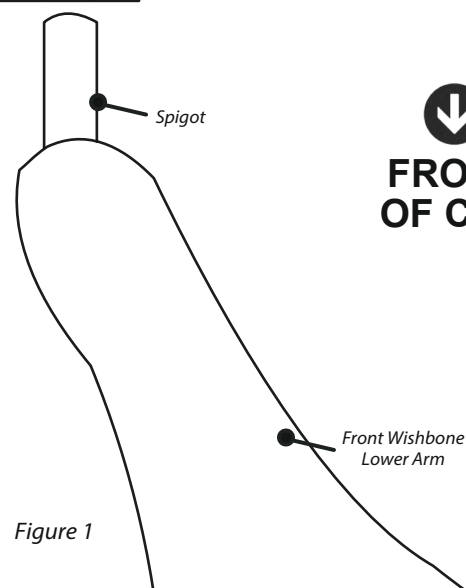
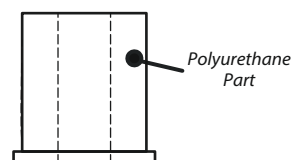
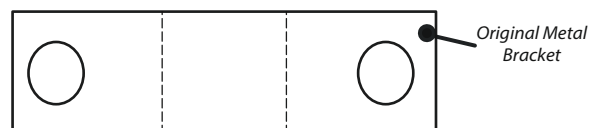


Figure 1